

L A S E R D E F E N S E S Y S T E M

LASERPRO™ 904



Operating Manual For LaserPro™ 904

Model LP904



BELTRONICS™

Ultimate Performance. Proven Technology.

Congratulations on your purchase of BEL LaserPro™ 904. BEL LaserPro™ 904 is designed as the ultimate in traffic Laser defense given that it produces countermeasures beyond the function of traditional Laser detectors by blocking the Laser beam that is targeted at your vehicle.

LaserPro™ 904 is comprised of sophisticated, exterior mounted front and rear Laser transceivers. You can operate LaserPro™ 904 as a stand-alone unit, and know you're protected beyond traditional "Laser detectors", or you can supplement LaserPro™ 904's capabilities with a dash or Remote Installation Radar/Laser/Safety detector from BELTRONICS.

Please Note:

Operating BEL LaserPro™ 904 is not a license to speed. Observe the local speed limits and laws governing the user of a Laser defense product. Use of LaserPro™ 904 is prohibited in some states. Check your local and state laws before use or call BELTRONICS:800-939-7373.

The Three transceivers of LaserPro™ 904 must have a clear view of the road in front and behind, and must be installed level to the road in order to work properly. Ensure your BEL LaserPro™ 904 is correctly positioned after it is installed.

IMPORTANT Notice

It is recommended that LaserPro™ 904 be professionally installed. New car dealers, and many reputable auto shops or car stereo stores should be able to install LaserPro™ 904. Call BEL toll-free at 800-737-9393, for the name of an authorized dealer near you. Installing LaserPro™ 904 without expertise in automotive electronic installations could cause personal injury, or damage to the unit or your vehicle. If your vehicle is damaged during installation, its safety systems may be compromised, which could cause personal injury or property damage.

Table of Contents

Quick Overview of Functions and LED Display	4
---	---

Button Functions/Explanation of LEDs

Power/Volume Button	5
Bright/Dim/Dark Modes	5
Disarm Button	5
Explanation of LEDs	5
Power On Indicator	5
Front/Rear Laser Alert Indicators	5

General Operation/Disarm Function	6
---	---

How Traffic Laser (LIDAR) Operates	7
--	---

Alert and Errors	8
----------------------------	---

Specifications	9
--------------------------	---

Troubleshooting	10
---------------------------	----

Questions and Answers	11
---------------------------------	----

Consumer Warranty	12
-----------------------------	----

Warranty Service	13
----------------------------	----

Post Warranty Service	14
---------------------------------	----

Quick Overview of Functions and LED Display

8. Green Power On LED: Illuminates to confirm LaserPro™ 904 is operational.

6. Three Blue LEDs: illuminate in conjunction with the “F” or “R” LED to confirm a Laser alert.

4. Red “F” LED: illuminates to confirm a Laser alert from the front.

5. Red “R” LED: illuminates to confirm a Laser alert from the rear.



1. P/V Button: Power and Volume button.

3. DIS Button: Press during a Laser encounter to stop LaserPro™ 904 from continuously blocking the return of the Laser signal once an alert is received.

7. Audio Speaker: All audio alerts are emitted from this opening.

2. DRK Button: Press once to “dim” the ALERT LED display; press a second time to cancel illumination of the ALERT LED display. The GREEN Power On LED will illuminate in “dim” mode to confirm LaserPro™ 904 is operational. Factory default is full brightness.

Button Functions

1. P/V Button: Press once to activate power to LaserPro™ 904*. Press and hold to cycle the volume control.

**Depending upon the type of installation, LaserPro™ 904 may be powered ON when your vehicle ignition is ON; and turned off, when your vehicle ignition is OFF.*

2. DRK (Dark) Button: Press once to “dim” the LED display. Press again to completely cancel illumination of the ALERT display. In “dark” mode, power to the unit is confirmed by the “dim” illumination of the GREEN Power On LED.

3. DIS – Disarm Button: Once a Laser alert is displayed via the red and blue ALERT LEDs, whether from the front or rear, press the DIS button to disarm LaserPro™ 904 from further “blocking” traffic Laser signals. BELTRONICS recommends that the DIS button be pressed within five seconds of a Laser

alert. Five seconds provides you enough time to adjust your vehicle speed and avoid any undue attention you may draw to yourself and your vehicle. If you choose, you can rearm LaserPro™ 904 by pressing the DIS button a second time (see page 6).

Explanation of LEDs

1. Power On Indicator: illuminates GREEN to confirm LaserPro™ 904 has power and is operational. This same LED illuminates in “dim” mode when you have activated either the “dim/dark” function.

Green LED also flashes during the DISARM mode.

2. 3 Blue LEDs: Illuminate to confirm a Laser alert. Distinct patterns confirm if the alert is from the front or rear.

3. “F” Red LED: Illuminates red to confirm a Laser alert from the front of your vehicle.

4. “R” Red LED: Illuminates red to confirm a Laser alert from the rear of your vehicle.

General Operation

Once you have BEL LaserPro™ 904 properly installed, you're ready for unencumbered travel. Assuming LaserPro™ 904 is "hard wired" into your vehicle's electrical system, each time you start your vehicle, LaserPro™ 904 will start up.

Conversely, each time your shut your vehicle off, LaserPro™ will shut down. When an alert is received, LaserPro™ 904 will confirm a traffic Laser encounter from

the front or rear. A Laser signal targeted at the transceivers mounted at the front of your vehicle will trigger an urgent audible alert and the illumination of the red "F" (Front) LED, coupled with the three blue LEDs ramping left to right; conversely, a signal targeted at the rear transceiver will set-off an urgent audible alert, coupled with the illumination of the red "R" (Rear) LED, and the "ramping" of the blue LEDs from right to left.

Generally, a Laser alert is very quick. Always remember to respond to any alert LaserPro™ 904 displays.

Once an alert is received, it is recommended that you confirm your vehicle's legal speed and Disarm your LaserPro™ 904 from further returning a "blocking" signal to the Laser source. Five seconds should be ample time for you to:

- a) *Verify your vehicle speed;*
- b) *Press the DIS (DISARM) button once you're in compliance with the posted speed limit.*

Disarm Function

Pressing **DIS** (Disarm) will terminate the LaserPro™ 904 transceivers from further returning a blocked signal to the Laser gun, and make certain countermeasures do not interfere with the officer's traffic Laser signal.

Once the **DIS** (DISARM) button has been pressed, LaserPro™ 904 will display a flashing green power LED. This flashing green LED serves to confirm that LaserPro is no longer "blocking" the Laser signal. This "monitoring" mode will last for 60 seconds.

Any signal received while in this mode will result in an alert – BUT NO “BLOCKING” OF THE LASER SIGNAL WILL OCCUR. When no Laser signal has been detected for 60 seconds, a short “beep” will be heard, coupled with FULL illumination of the green power on LED. This FULL illumination of the power on LED confirms that the front and rear transceivers have been re-armed and are ready to “block” future Laser encounters.

Re-arming LaserPro 904

Once you have pressed the DIS button, you can “rearm” the blocking function without waiting the 60 second time period. To “rearm” LaserPro™ 904 BEFORE the automatic 60 second time out expires, simply press the DIS button a second time. LaserPro™ 904 will be ready to “block” the Laser signals.

Note: If the LaserPro™ 904 is not disarmed during a Laser encounter it will continue to return blocking signals whenever receiving further Laser transmissions.

How Laser (LIDAR) Operates

Laser speed detection is actually LIDAR (Light Detection and Ranging). LIDAR guns project a narrow beam of invisible, infrared light. The signal is a series of very short infrared light energy pulses that move in a straight line, reflecting off your car and returning to the gun. LIDAR use the light pulses to measure the distance to a vehicle. A very accurate speed reading is calculated by comparing the change in distance over time.

LIDAR (or Laser) is a newer traffic monitoring technology and is not as widespread as conventional radar; therefore, you may not encounter Laser on a daily basis. And unlike radar detection, Laser detection is not prone to “false” alarms. Because LIDAR transmits a much narrower beam than does radar, it is much more accurate in its ability to distinguish between targets and is also more difficult to detect. As a result, even the briefest Laser alert should be

taken seriously. There are limitations to LIDAR equipment. LIDAR is much more sensitive to inclement weather conditions than RADAR, and a LIDAR gun's range will be decreased by anything affecting visibility such as rain, fog, or smoke. A LIDAR gun cannot operate through glass and it must be stationary to get an accurate reading. Because LIDAR must have a clear line of sight and is subject to cosine error (an inaccuracy which increases as the angle between the gun and vehicle increases) police typically use LIDAR equipment parallel to the road or from an overpass within 500-1000 feet from targeted vehicle. LIDAR can be used day or night.

Loss Of Connection Alert

BEL LaserPro™ 904 comes complete with built-in self-diagnostic circuitry, and error indications.

During the start-up sequence, the display will make certain that all components are connected and communicating

properly to ensure optimum performance.

On initial start-up, a power-on test sequence occurs. During this time communications between the front transceivers, the interface (the "hub" installed under your vehicle's dash which the transceivers and control display are connected) and the rear transceiver are tested. Finally, the interface and control display communications are tested. If everything is working correctly, the green power-on indicator will remain "on".

Error Indications

LaserPro™ 904 is in constant communication with each of its components. If at anytime a problem occurs that could impede performance, (i.e. cable is disconnected) an error message will occur.

Front Transceiver Error

If one, or both of the front-mounted transceivers are not communicating properly or become disconnected, the red "F" LED (front) on the display will illuminate fully coupled with an audible tone. This alert will continue until the unit is turned off, indicating that service is required.

Rear Transceiver Error

If the rear transceiver is not communicating properly, or becomes disconnected, the red "R" LED (rear) on the display will illuminate fully, coupled with an audible tone. This alert will continue until the unit is turned off. Contact your installer for servicing.

Specifications

Operating Band

Laser 904nm, 33 MHz bandwidth

Laser Detection

**Quantum Limited Video Receiver
Multiple Laser Sensor Diodes (6F, 3R)**

Laser Transmitter

Multiple Laser-Blocking Diodes (16F, 8R)

Display Type

Hi-visible LED indicators

Power Requirement

12VDC, Negative Ground

Dimensions (inches)

Display/Controller: 2.25 x 2.0 x .66

Front Laser units: 4.65 x 1.8 x .08

Rear Laser unit: 6.0 x 1.0 x .65

Problem

LaserPro™ 904 does not appear to be ON

Solution:

- Check that the P/V control is turned ON.
- Check that the vehicle ignition is ON.
- Check all connections.

Problem

LaserPro™ 904 gave no alert when a police car was in sight

Solution:

- Officer may not have the Laser unit turned on
- Officer may have been targeting another vehicle
- Officer may be using a radar gun, not a Laser gun.

Problem

The control display feels warm to the touch.

Solution:

- It is normal for the display to feel warm

Problem

LaserPro™ 904's power-on sequence reoccurs while you are driving

Solution:

- A loose power connection can cause LaserPro™ 904 to be briefly disconnected, and will trigger the power-on sequence.

Problem

During the start-up sequence, the LED labeled "F" continues to flash, and a warning sound is heard.

Solution:

- The front transceivers are not communicating to the interface. Check all connections, or contact your installer.

Problem

During the start-up sequence, the "R" indicator (LED) flashes and a warning tone is heard.

Solution:

- The rear transceiver is not communicating with the interface. Check all connections, or contact you local installer.

Q. Is LaserPro™ 904 theft-Proof?

A. Generally yes. Although LaserPro™ 904 is relatively visible on the exterior of your vehicle, it is deemed fairly “useless” to anyone wanting the transceivers themselves. Any “thief” would have to cut the cables in order to remove the transceivers, which would render them useless to anyone.

Q. Can LaserPro™ 904 be used on a Motorcycle?

A. Yes, providing the Laser transceivers are adequately shielded from the elements.

Q. Is LaserPro 904 weather-proof?

A. Yes. All three transceivers are completely sealed against the elements. Their unique design guards against water, moisture and dust.

Q. Is LaserPro™ 904 a legal device?

A. Generally yes. While the FCC governs RF devices that would “interfere” with law enforcement’s traffic Radar, Laser on the other hand, is comprised of infrared wavelengths of light,

and therefore not governed by the FCC, but rather the FDA, which has no regulations concerning interference with traffic Laser signals. LaserPro 904 is legal to use in most states except for California, Utah, Virginia, and Minnesota. Check with your local code before use, or call BELTRONICS at: 800-737-9393.

Q. Can I use a traditional dash mounted Radar/Laser detector with LaserPro™ 904?

A. Yes. As discussed throughout this manual, LaserPro™ 904 only detects Laser signals and provides a warning alert coupled with Laser countermeasures. LaserPro™ 904 does not detect traffic Radar signals. You can purchase any BEL detector to complement the protection obtained with a LaserPro™ 904. Simply operate the dash-mounted detector in tandem with LaserPro™ 904 for the best protection possible. You may also consider a BEL remote installation radar/Laser detector. Visit you local BEL retailer or call BELTRONICS to inquire at 800-737-9393.

1 Year Limited Warranty

1. This warranty covers all defects in material and workmanship. This warranty does not apply if the unit has been subject to physical abuse, improper installation, modification, or if the housing or serial number of the unit has been removed.
2. The enforceability of this warranty is limited to the original consumer purchaser and is not transferable to, or enforceable by, any subsequent owner.
3. In the event of a defect, malfunction or other failure to consumer to this warranty, BELTRONICS will, at its sole discretion, repair or replace the unit at no charge. You are responsible for all shipping costs in connection with warranty service pursuant to this warranty.
4. This warranty commences on the date of retail purchase and shall be effective for a period of one year.
5. There are not express warranties covering the unit other than those set forth in this warranty. All implied warranties are limited to the period of this warranty and no warranties are limited to the period of this warranty and not warranties expressed or implied, extend beyond this period. Some states do not allow limitation on how long an implied warranty lasts, so the above may not apply to you.
6. BELTRONICS will in no event be liable for any consequential, incidental, indirect or special damages (including, but not limited to, lost profits) arising out of or in connection with the use, misuse, or function of the unit. Some states do not allow the exclusion of limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.
7. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.
8. You must provide a copy of a dated sales receipt for your unit in order to receive service under warranty.

Warranty Service

If you feel your LaserPro™ 904 is not operating properly, please review this manual, particularly the section on Troubleshooting.

If you still feel service is required, please follow the instructions below:

1. To obtain service during the warranty period, please call the appropriate number below to obtain an RA number and shipping instructions. Remember to return your detector postage paid, insured and in suitable packaging:

800-341-2288 USA

800-268-3994 CAN

2. For your own protection, obtain a proof of delivery receipt. Shipping costs are your responsibility.
3. Enclose with your unit the following information:
 - a) Your name, complete return address and written description of the problem. (No P.O. Box Please)
 - b) A telephone number where you can be reached during regular business hours.
 - c) A copy of your dated sales receipt.

Post Warranty Service

The following arrangements apply if the warranty period has expired or you are not able to provide a copy of your dated sales receipt indicating purchase within the last 12 months.

1. Return your unit to the appropriate address under Warranty Service and follow steps 1 through 3(b) outlined in that section.
2. Enclose with your unit \$85 US or \$115 CAN to cover inspection and postage return. Prices subject to changes without notice.

For replacement parts and costs, please call:

1-800-341-2288 USA

1-800-268-3994 CAN



BELTRONICS™

Ultimate Performance. Proven Technology.

Head Office
2422 Dunwin Drive
Mississauga, Ontario
Canada L5L 1J9
Tel: (905) 828-1002 Fax: (905) 828-2951
www.beltronics.com

This product is subject to one or more of the following patents:

United States

#4,571,593	#4,625,210	#4,630,054	#4,939,521
#4,952,936	#4,961,074	#5,402,087	#5,446,923
#5,587,916	#5,600,132		

Canada

#1,187,586	#1,187,602	#1,295,714	#1,295,715
------------	------------	------------	------------

Other Patents Pending

BEL is a registered trademark of BELTRONICS USA, Inc. LaserPro 904 is a trademark of BELTRONICS USA, Inc.